

D-Line Installation Guide... Please read



FITTING ACCESSORIES


The angles of the bends should match the angles of the wall. In some instances the sharp back corner may need to be rounded.



Use the accessory part as a template; pencil mark the surface at the shoulder points of the accessory.



These pencil marks indicate the point that the D-Line length needs to measure up to.

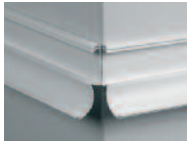

When fitting external bends end sections of lengths will need to touch.



CUTTING D-LINE

Measure length(s). Pencil mark where cut is required. Use a mitre block and junior hacksaw or...



Place length into Ratchet Cutter with curved edge at top nearest the blade. Take care to make a straight cut on the pencil mark.



INSTALLING LENGTHS

For horizontal runs have click-lock at top and hinge at base.



Take care when positioning D-line as a strong bond will be created with surface

CUSTOMER AFTER CARE



D-Line can accept gloss or emulsion paints... ideally advise clients to use fine sand paper to key the surface prior to painting.



Accessories and lengths should align to make a perfect finish. This requires lengths are cut straight so just take care and attention!

It shouldn't happen but... if there is a gap between length and accessory, we advise using caulk to fill.

Installation or technical queries:

D-Line (Europe) Limited

Tel: 0191 236 0960 email: enquiries@d-line-it.co.uk

www.d-line.co.uk